
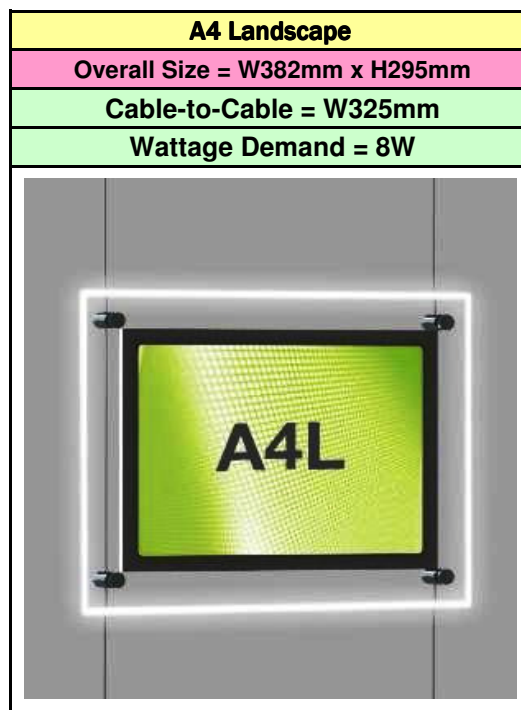


## Bevelled LED Pockets'

Supplied - LED Pocket Only



Not Supplied - All necessary cables and transformers

Designed to allow clients to replace or extend their current display

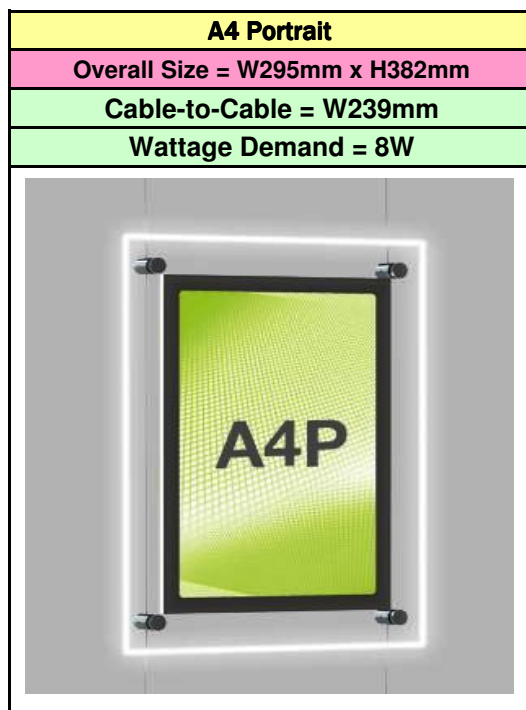

### Guide:

1. Wattage is given for each type of LED pocket
2. Never overload your transformer!
3. If you have a transformer that allows 120W - Then, never exceed pockets over 100W
4. This allows a friendly 20W to avoid transformer burn outs

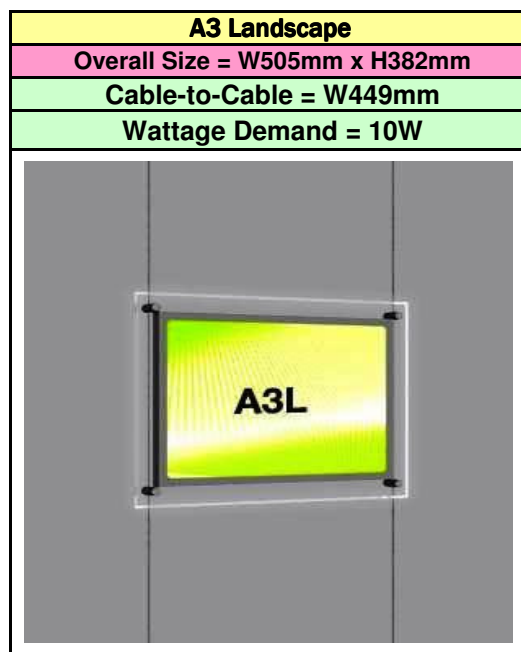
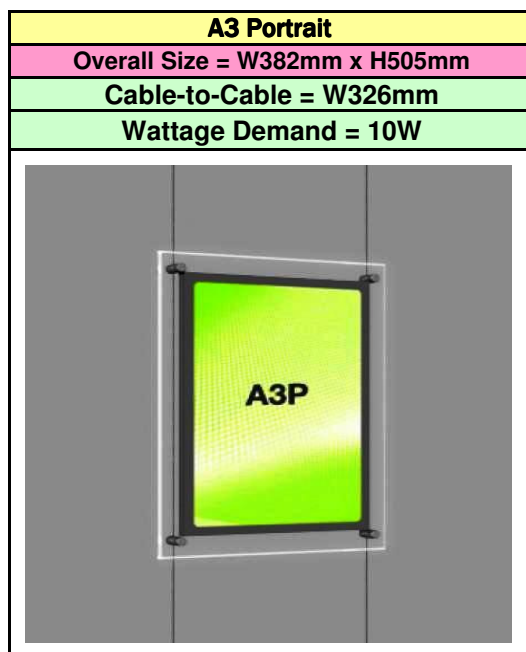


## Bevelled LED Pockets'

Supplied - LED Pocket Only


Not Supplied - All necessary cables and transformers

Designed to allow clients to replace or extend their current display

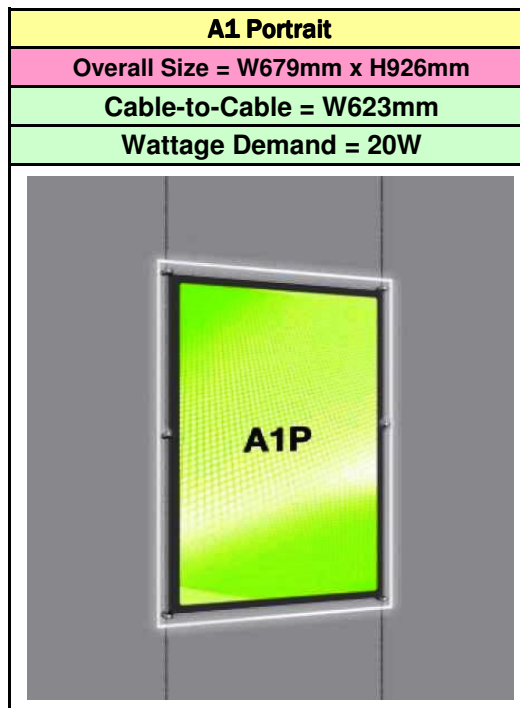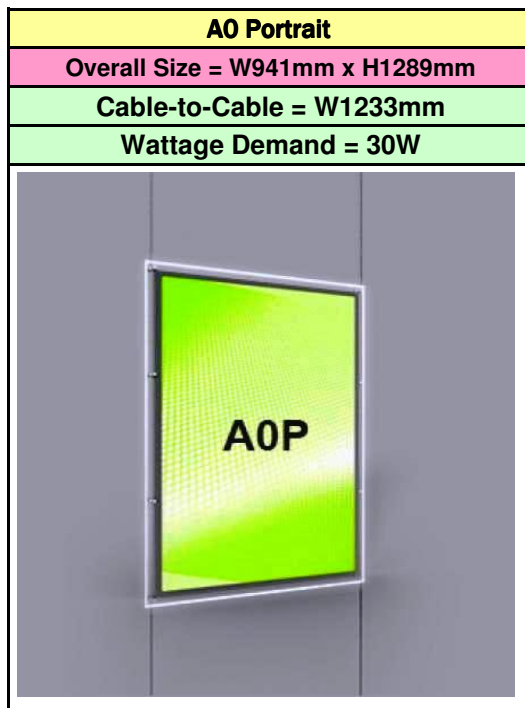

### Guide:

1. Wattage is given for each type of LED pocket
2. Never overload your transformer!
3. If you have a transformer that allows 120W - Then, never exceed pockets over 100W
4. This allows a friendly 20W to avoid transformer burn outs


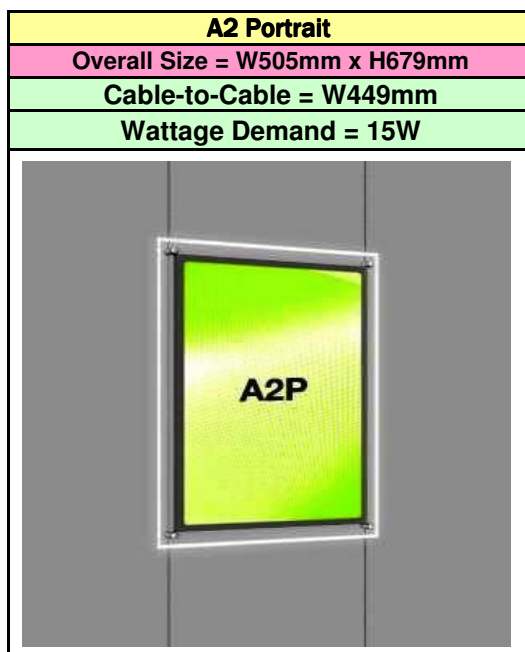


## Bevelled LED Pockets'

Supplied - LED Pocket Only

Not Supplied - All necessary cables and transformers

Designed to allow clients to replace or extend their current display

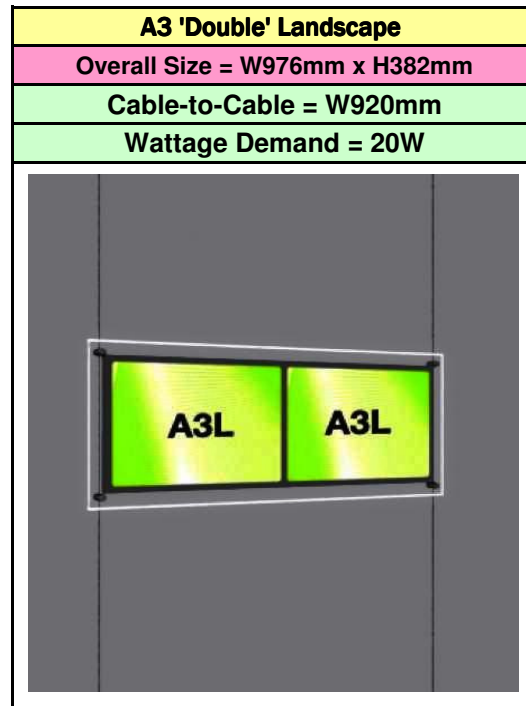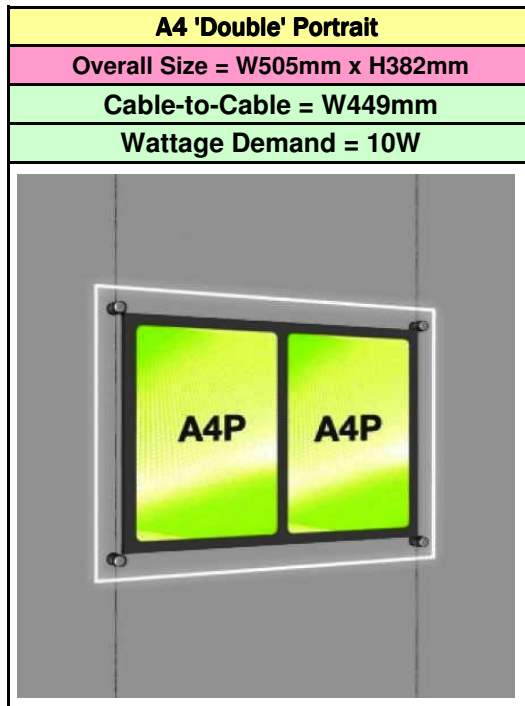

### Guide:

1. Wattage is given for each type of LED pocket
2. Never overload your transformer!
3. If you have a transformer that allows 120W - Then, never exceed pockets over 100W
4. This allows a friendly 20W to avoid transformer burn outs

